



IPC Correction-Free Auto IRIS

Application Notes

Issue 01

Date 2018-12-26

Copyright © HiSilicon (Shanghai) Technologies Co., Ltd. 2019. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of HiSilicon (Shanghai) Technologies Co., Ltd.

Trademarks and Permissions



HISILICON, and other HiSilicon icons are trademarks of HiSilicon Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between HiSilicon and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

HiSilicon (Shanghai) Technologies Co., Ltd.

Address: New R&D Center, 49 Wuhe Road, Bantian,
Longgang District,
Shenzhen 518129 P. R. China

Website: <http://www.hisilicon.com>

Email: support@hisilicon.com



About This Document

Purpose

This document describes the software and hardware design key points for the Internet Protocol camera (IPC) correction-free automatic iris (AI) circuit.

Related Versions

The following table lists the product versions related to this document.

Product Name	Version
Hi3516C	V300
Hi3516E	V100
Hi3559A	V100
Hi3559C	V100
Hi3519A	V100
Hi3556A	V100
Hi3516E	V200
Hi3516E	V300
Hi3518E	V300
Hi3516D	V200
Hi3516C	V500
Hi3516D	V300
Hi3516A	V300
Hi3559	V200
Hi3556	V200



Intended Audience

This document is intended for:

- Field application engineers
- Hardware engineers

Change History

Changes between document issues are cumulative. Therefore, the latest document issue contains all changes made in previous issues.

Issue 00B01 (2018-12-26)

This issue is the first official release.



Contents

About This Document.....	iii
1 Description	1
1.1 Introduction	1
2 AI Hardware Implementation Circuit.....	6
2.1 AI Analysis	6
2.2 Preferable Hardware Implementation Circuit	7
3 AI Algorithm.....	8



1 Description

1.1 Introduction

You can control the amount of light entering an AI lens by increasing or decreasing the aperture based on image signal processor (ISP) outputs.

AI lenses include video-driven lenses and DC-driven lenses.

- Video-driven lens: The lens converts video amplitude signals received from a camera into iris motor control signals by using a built-in amplifier circuit. Generally, three pins are used for a video-driven AI interface, including the power supply pin (+), video pin, and ground pin.
- DC-driven lens: The lens controls the iris by using the DC voltage on a camera. It drives the built-in iris motor by using DC voltage transferred over the built-in iris motor driver circuit. Four pins are used for a DC-driven AI interface, including DRV+, DRV-, CONT+, and CONT-.

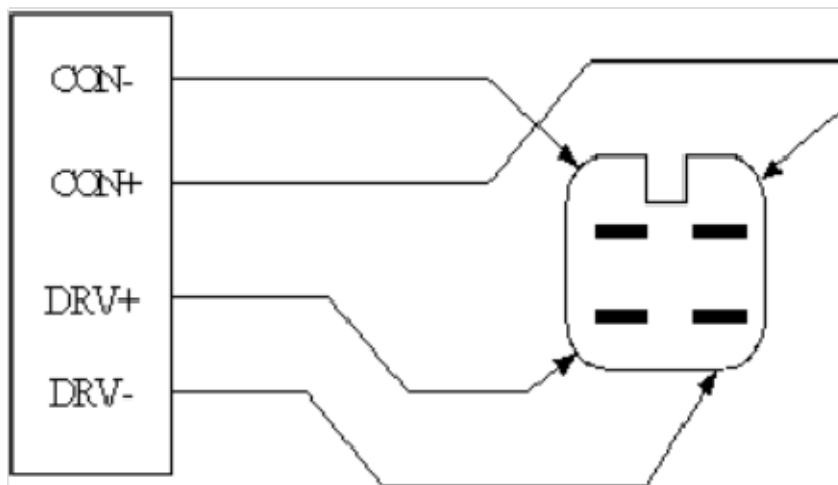
DC-driven lenses are widely used in the security and protection field. Descriptions of the DC-driven lenses are as follows:

The iris is an optical curtain driven by a fixed drive coil and a rotational magnetic core. A feedback coil (also called a damping coil or braking coil) is assembled with the fixed drive coil.

When the light is weak, a camera increases the positive voltage transferred from the totem-pole drive optional amplifier to the drive coil. The drive coil is driven by positive voltage, and the optical curtain moves towards the opening direction. In addition, the feedback coil cuts the magnetic lines of the rotor, generating electromotive force. The electromotive force increases as the rotational speed of the rotor increases and is coupled to the negative feedback terminal of the operational amplifier. The operational amplifier then decreases the voltage output to the drive coil for controlling the opening speed of the optical curtain.

When the light is strong, the camera transfers negative voltage to the circuit. The drive coil is driven by negative voltage, and the optical curtain moves towards the closing direction. In addition, the negative feedback terminal of the feedback coil responds to reduce the closing speed of the optical curtain. Based on continuous adjustment by the camera, the optical curtain is in a dynamic balancing state, which indicates the opening size of the optical curtain.

Figure 1-1 shows the AI control signal interfaces and AI motor interfaces.

Figure 1-1 AI control signal interfaces and AI motor interfaces


Before verifying the AI function, ensure that the drive voltage of the AI control circuit changes linearly within a certain range according to the PWM duty cycle. [Table 1-1](#) describes the mapping between the drive voltage of the AI control circuit and the duty cycle of the PWM signal (no load and lens). [Table 1-2](#) describes the mapping between the drive voltage of the AI control circuit and the duty cycle of the PWM signal duty cycle (with loads and lenses).

Table 1-1 Mapping between the drive voltage of the AI control circuit and the duty cycle of the PWM signal (no load and lens)

Duty Cycle of the PWM Signal	DRV (V)
79%	3.45
78%	3.42
77%	3.32
76%	3.22
75%	3.12
74%	3.02
73%	2.92
72%	2.82
71%	2.72
70%	2.62
69%	2.52
68%	2.42
67%	2.32
66%	2.22



Duty Cycle of the PWM Signal	DRV (V)
65%	2.12
64%	2.02
63%	1.92
62%	1.82
61%	1.72
60%	1.62
59%	1.52
58%	1.42
57%	1.32
56%	1.22
55%	1.12
54%	1.02
53%	0.92
52%	0.82
51%	0.72
50%	0.62
49%	0.52
48%	0.42
47%	0.32
46%	0.22
45%	0.12
44%	0.02
43%	0.01
42%	0.01
41%	0.01
40%	0.01
39%	0.01



Table 1-2 Mapping between the drive voltage of the AI control circuit and the duty cycle of the PWM signal duty cycle (with loads and lenses)

Duty Cycle of the PWM Signal	DRV (V)
79%	2.88
78%	2.88
77%	2.88
76%	2.88
75%	2.88
74%	2.88
73%	2.88
72%	2.88
71%	2.88
70%	2.87
69%	2.87
68%	2.85
67%	2.8
66%	2.72
65%	2.62
64%	2.53
63%	2.43
62%	2.34
61%	2.24
60%	2.15
59%	2.06
58%	1.96
57%	1.87
56%	1.77
55%	1.68
54%	1.59
53%	1.5
52%	1.4
51%	1.31
50%	1.22



Duty Cycle of the PWM Signal	DRV (V)
49%	1.12
48%	1.03
47%	0.94
46%	0.85
45%	0.76
44%	0.66
43%	0.57
42%	0.48
41%	0.39

The recommended operational amplifier models are ST LM358 and TI TLV2372.

The AI operational amplifier chip must be selected based on the following test data of actual circuits:

- When there are no loads and lenses, and the duty cycle of the PWM output signal is 60%, the output amplitude of the DRV+ signal ranges from 1.6 V to 2 V.
- When there are loads and lenses, and the duty cycle of the PWM output signal is 50%, the output amplitude of the DRV+ signal is less than 1.6 V.
- When there are loads and lenses, and the duty cycle of the PWM output signal is 80%, the output amplitude of the DRV+ signal is greater than 2.8 V.

Note that the preceding test data is obtained from the tests based on the HiSilicon demo board and lenses, and only serves as references. During application, when the duty cycle of the PWM output signal is 10%, the lenses can be disabled. When the duty cycle of the PWM output signal is 90%, the lenses can be enabled. When there are loads, each time the duty cycle of the PWM output signal in the linear region is incremented by 1%, the output amplitude of the DRV+ signal is incremented by about 0.1 V accordingly.



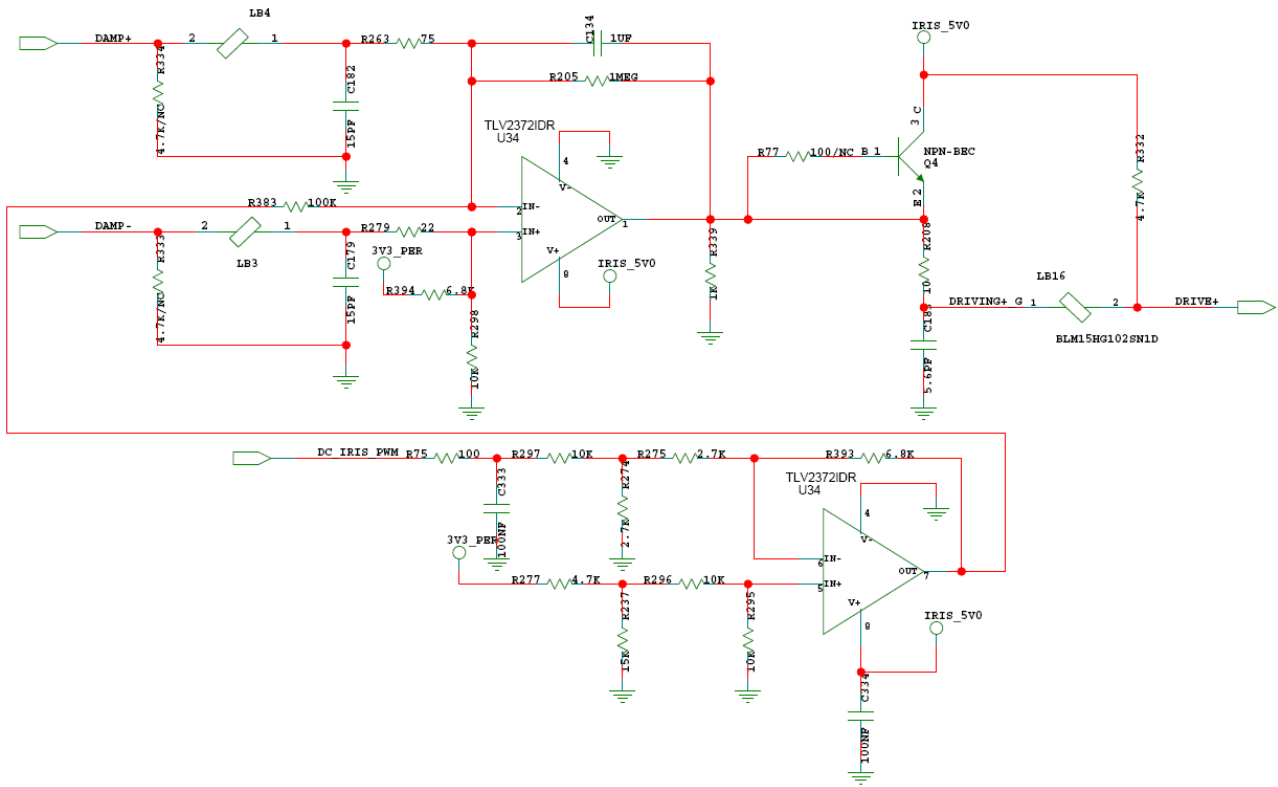
2 AI Hardware Implementation Circuit

2.1 AI Analysis

When the drive voltage is greater than the damping coil voltage, the iris is opened. The current luminance information is collected by algorithms based on the histograms in the ISP.

- When the automatic exposure (AE) is set to the minimum value and the luminance shown in the histogram is higher than the normal value, decrease the aperture and the amount of light until the luminance of the image becomes normal.
- When the AE is set to the maximum value and the luminance shown in the histogram is lower than the normal value, increase the aperture and the amount of light until the luminance of the image becomes normal.

To slowly open and close the iris, the system outputs the PWM duty cycle based on the collected luminance information, converts the PWM signal into DC voltage over the RC circuit, and controls the drive voltage by using the amplifier circuit.

Figure 2-1 AI control circuit


2.2 Preferable Hardware Implementation Circuit

- You must design the circuit by completely following the HiSilicon circuit for the IP camera. For details, see the circuit diagram of the DC_IRIS I part in the schematic diagram of the ai_circuit_verb board, as shown in [Figure 2-1](#).
- It is required that 1% resistors and 5% capacitors be used in the circuit to ensure precision control.
- During the product design, you cannot use resistors and capacitors whose specifications are close to those of the required resistors and capacitors, and you cannot use 5% resistors and 10% capacitors to replace the required resistors and capacitors. The iris precision control may be affected due to the consistency variance of components from different lots. You cannot reduce the number of resistors through equivalence. You must choose the operational amplifier models recommended by HiSilicon.
- In the D-IRIS circuit, the quality of the 5 V power supply is important, which directly affects the iris precision control. The iris may oscillate if the ripples and noises of the power supply are too large. Theoretically the smaller the ripples and noises of the 5 V power supply are, the more precise the iris control is. It is recommended that the ripples and noises of the 5 V power supply be less than 30 mV (the smaller, the better). For details about the 5 V power supply, see the circuit diagram of the DC_IRIS I part in the schematic diagram of the ai_circuit_verb board, as shown in [Figure 2-1](#).



3 AI Algorithm

Note the following when using the AI algorithm:

- Before testing the lens by using the AI algorithm, you are advised to check whether the AI circuit characteristics meet the preceding circuit design requirements.
- For the DC iris, the correction-free AI algorithm adjusts the iris based on the environment luminance. When the minimum exposure time and gain are reached, the AI algorithm starts iris control. If the iris control meets the requirements of the target luminance, the AE exits directly and the exposure time and gain remain unchanged. After the picture luminance becomes stable and the PWM duty cycle retains the value when the iris is opened for a while, the AI algorithms consider that the iris has been opened to the maximum size, end the iris control, and hand over the control to the AE algorithm. During iris control, if AE algorithm parameters that need to take effect immediately (for example, the maximum/minimum exposure time, maximum/minimum gain, and anti-flicker parameter) are changed, the AE algorithm responds instantaneously. Then the AI algorithm determines whether to start iris control based on the configured parameters and ambient luminance. Starting or ending iris control takes a short period of time. Therefore, you are advised to disable AI when the non-DC iris is used; otherwise, the AE adjustment speed will be affected. It is recommended that AI be always enabled for the DC iris because disabling and enabling AI may result in iris control exceptions.
- When using a HiSilicon demo board or reference board to perform the DC-Iris test, you can specify the PWM number to be used. For details about the AI MPis and how to specify the PWM number, see the *HiISP Development Reference*.